PIN CONNECTIONS FOR BEVERAGE INTERFACE BOARD AND KEY PAD RIBBON

J3---- Key Pad Communication

- 1--- 11 Arrow Up
- 2--- 8 Arrow Down
- 2--- 9 Arrow Right
- 2--- 10 Arrow Left
- 2--- 11 Silent Alarm
- 3--- 8 12 OZ
- 3--- 9 Flavor 1
- 3--- 10 Flavor 6
- 3--- 11 Manual / Auto
- 4--- 8 42 OZ
- 4--- 9 Flavor 5
- 4--- 10 Flavor 8
- 4--- 11 Enter
- 5--- 8 32 OZ
- 5--- 9 Flavor 4
- 5--- 10 Water
- 5--- 11 Extra Ice
- 6--- 8 21 OZ
- 6--- 9 Flavor 3
- 6--- 10 Soda
- 6--- 11 No Ice
- 7--- 8 16 OZ
- 7--- 9 Flavor 2
- 7--- 10 Flavor 7
- 7--- 11 Back / Clear
- 8--- 2 Arrow Down
- 9--- 2 Arrow Right
- 10--- 2 Arrow Left
- 11--- 1 Arrow Up
- 12--- Common

BOARD SOCKET CONNECTIONS

J3
1 2 3 4 5 6 7 8 9 10 11 12