

# COCA-COLA NORTH AMERICA EQUIPMENT BULLETIN... SERVICE

**DATE:** 11/17/2008

**NUMBER:** SERV-249

**SUBJECT:** ABS Umbilical Assembly Installation Guide

## **Background:**


The ABS Umbilical assembly has been changed, and the orientation is critical to proper installation. The instructions below will help make the installation process easier.

## **Key Information:**

The assembly comes with a metal adapter plate that is only used with the older "PHD" lift cylinders along with two tie-wraps. Note: the older two wire sold-out harness cannot be used on the new lift assembly.




Lift Assembly

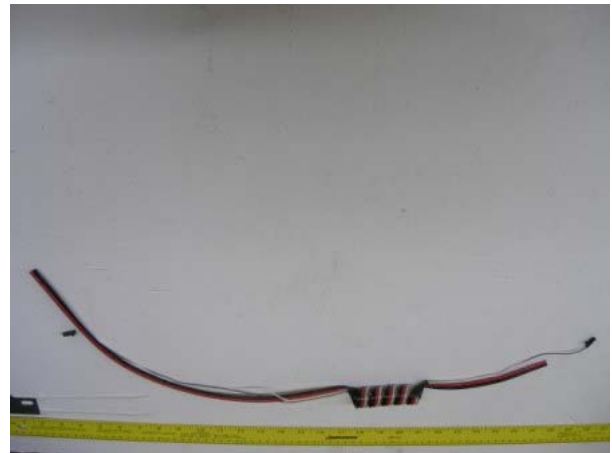



Umbilical Assembly

The following page contains some guidelines for proper orientation.

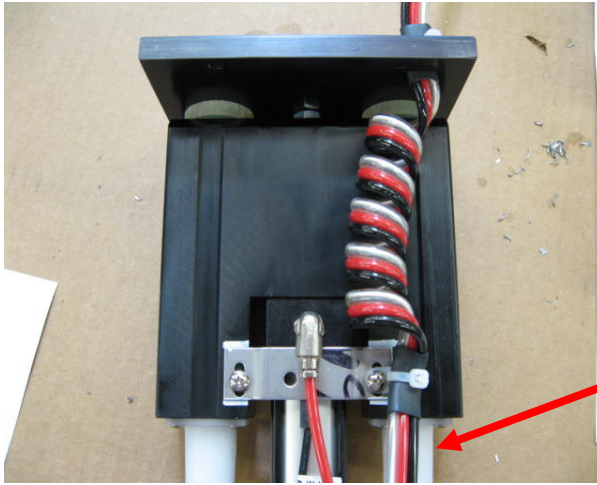

The black tube should be closer to the edge near the full travel sensor as shown here

The 2 tie-wraps should be over the black sheathing and should be orientated correctly. The tie-wrap near the bracket is CCP#1066691 (Does not come with the Umbilical)

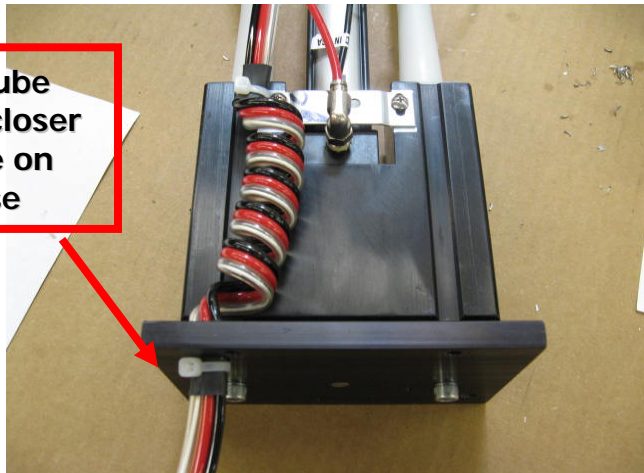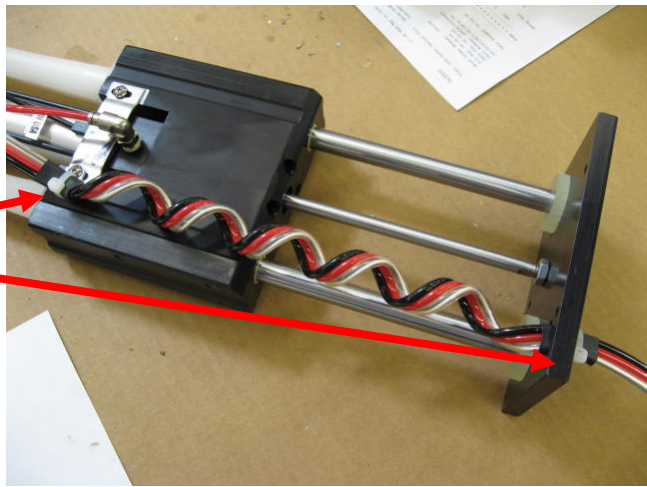

The clear tube should be closer to the edge on the top base

**FOR ADDITIONAL INFORMATION CONTACT:**

PhoneFix® - Primary	Customer Service Operations	Sales Equipment Engineering	Coca-Cola Parts
(800) 817-2653	John McCullough (404) 887-2756	J. Bruce Fricks (404) 676-6831	(800) 638-2653